

Braille 'n Speak

Quick Reference Card

July 1, 1990

Blazie Engineering
3660 Mill Green Road
Street, Maryland 21154
(301) 879-4944

HU1672
.B53
1990



**M.C. MIGEL LIBRARY
AMERICAN PRINTING
HOUSE FOR THE BLIND**



Digitized by the Internet Archive
in 2016

Braille 'n Speak

Quick Reference Card

July 1, 1990

Blazie Engineering
3660 Mill Green Road
Street, Maryland 21154
(301) 879-4944

Contents

Introduction.....	1
File Commands.....	1
Editing Commands.....	2
Entering Text.....	2
Cursor Movement and Speaking	2
Finding, Deleting, and Inserting.....	3
Clipboard.....	3
Macros	3
Speech Parameters.....	4
Data Transmission.....	4
Communications Parameters	4
Transmitting Data.....	4
Clock/Calendar.....	5
Calculator.....	5
Stopwatch.....	6
Disk Drive Functions.....	6
Miscellaneous Commands.....	6
Default Values.....	6

Introduction

Braille 'n Speak is a product of Blazie Engineering, 3660 Mill Green Road, Street, Maryland, 21154, (301) 879-4944. A Braille 'n Speak page is 4,096 characters. There are a total of 45 free pages (besides help and clipboard). There is a limit of 30 files. A line ends with a carriage return. A paragraph ends with 2 carriage returns or 2 carriage return/linefeed pairs. Format commands allow you to specify line length and page length at time of printing. Notation: In this reference card, "chord" will be indicated by the symbol "&" immediately preceding the braille cell that is to be chorded. For example, chord-a would be written &a and chord-dots 2-6 would be written &en. Any punctuation following the braille cell to be chorded will be preceded by dots 4-5-6. [y, n] means answer y for yes or n for no; unless otherwise indicated, # means a number (in Nemeth) must be entered; spaces in command sequences are to be ignored.

File Commands

&th - go to the help file from anywhere (an abort &z will take you back to where you were) &o # - go directly to the # file; works with a value of 01-30
&o f - go into file options menu.
c [file name] &e [file size in blocks (2 Nemeth digits)] &e [y, n] for translator - create a file (file names cannot exceed 20 characters; avoid punctuation in file names) avoid Grade 2 in file names.
o [file name] &e - open an existing file
d [file name] &e delete a file
l - list all files (at end of list, gives number of free pages)
t - tell the name of the currently open file
p - write-protect currently open file
u - unprotect currently open file
b - make currently open file bigger
s - make currently open file smaller
r - rename currently open file
f - tell number of free pages
for [y, n] - recover currently open file
&c - speak name of currently pointed to file
&a - move pointer back one file
& dot 4 - move pointer forward one file
&: - spell name of currently pointed to file
&L - move to top of file list

&_ - move to bottom of file list
&o - open the pointed to file
&d - delete the pointed to file
&e, &z, or e - exit file options menu

Editing Commands

Entering Text

Any characters typed - appended to the end of the file unless in insert mode

&b backspace

&wh - speak column number and cursor location

&r - speak room left in current file

&p c [y, n] - set cursor tracking

&p t [y, n] - set braille translation mode (can change your mind after you create a file)

&u &u - uppercase lock (not normally used with translator on).

&q - uppercase unlock

&u - uppercase next character only (not normally used with translator on, use dot 6).

&x - control character follows; **&x ow** escape, **&x m-** carriage return

&ch # &e - tab (is actual column number after last carriage return)

Cursor Movement and Speaking

& dot 3 - move back one character (gives higher pitch for uppercase)

&- - speak current character, do twice to get phonetic indicator (e.g. alpha, bravo, etc.); (gives higher pitch for uppercase)

& dot 6 - move forward one character (gives higher pitch for uppercase)

& dot 2 - move back one word

& dots 2 5 speak current word, do twice for spelling

& dot 5 - move forward one word

&a - move back one line

&c - speak current line

& dot 4 - move forward one line

& dots 2 3 - move back one paragraph

& dots 5 6 - move forward one paragraph

&L - move back to beginning of text

& dots 4 5 6- move forward to end of text

&dots 1 2 4 5 6 - speak all text from cursor position to end of file

& dots 3 4 5 6 # &e move forward or back # lines; if back, number should be preceded by a minus sign

&dots 1 2 3 4 6 [y, n] - skip blank lines when moving cursor

&p w &e - set a voice window from 20 to 80 characters long; a voice window is like a soft line; has no effect on formatting or printing

&w [y, n] - speak windows, lines, or sentences (w, l, or s)

Finding, Deleting, and Inserting

&f [text] &e - find forward; text can be up to 255 characters; can use backspace

&f [text] &th - find backward; text can be up to 255 characters; can use backspace

&the [y, n] - set "find including case"; the default for find is NOT to be case-specific

&d [c, w, l, p, z] &e - delete (C means character, W means word, L means line, P means paragraph, and Z means all text from the cursor position to end of file)

& dots 2 4 6 - overwrite current character

&i [text] &e - insert at cursor position, up to 255 characters at a time;

&b backspace is allowed when entering text

&z - abort find, delete, and insert

Clipboard

Any deletion copies the text being deleted into the clipboard (clipboard is limited to 4,095 characters, it is destroyed by speech box mode)

& dots 3 4 6 - insert the contents of the clipboard into file at cursor position

&m - set marker; each file can have its own marker; marker is altered by inserting, deleting, or transmitting; marker is deleted when another marker is set.

& dots 3 4 5 6 m - move cursor to marker position

&d m &e - delete from marker to cursor (or from cursor to marker)

& dots 1 2 6 - copy text between marker and cursor into clipboard without deleting from text

Macros

&n a-z - start recording macro a-z (up to 31 characters)

&n - stop recording a macro

&j a-z execute macro a-z

&k - kill macro speech

&v - verbalize macro speech

& dots 1 6 - pause macro for single character input from user

Speech Parameters

&ar - go into speech parameters mode
dot 1 - softer volume
dot 4 - louder volume
dot 2 - slower speed
dot 5 - faster speed
dot 3 - lower pitch
dot 6 - higher pitch
space bar - switch between keyboard modes (key echo, key click, and silent keys)
n - switch between digit modes (speak digits or speak numbers)
s - some punctuation
m - most punctuation
t - total punctuation (includes spaces and control characters)
&e or &z - exit speech parameters mode

Data Transmission

Communications Parameters

&p b - set baud rate (use first one or two digits of baud rate)
&p dots 4-5-6 [7, 8] - set data length
&p p [n, e, o] - set parity
&p s [1, 2] set stop bits
&p h [s, h, n] - set handshaking (Braille 'n Speak will "tweet" if it starts to lose data when the sending device ignores handshaking)
&p d [h, f, n] - set duplex (in half duplex, typed text is stored and sent out the port; in full duplex, typed text is not stored but is sent out the port; in no duplex, typed text is stored but not sent out the port; in all modes, what is sent in through the port is stored in memory)
&g - turn interactive mode on and off
& dots 3 4 - enter status menu (&dot 4 moves forward, &a moves back; &L moves to top of menu, & dots 456 moves to bottom of menu; this (dots 1-4-5-6) gives elapsed battery time, was (dots 3-5- 6) [y, n] resets battery timer; q sets end-of-line bell)

Transmitting Data

&p dots 2-6 [y, n] - turn serial port on or off; &t commands automatically turn it on and off.
&t [a, b, l, m, s, p, z] -transmit text;
a means all (goes to top of file before sending)

b means braille (sends from cursor position, turns translator off);

L means line;

m means cursor position to mark;

p means paragraph;

s means send, goes to top of file, turns translator off, sets formatting parameters to zero, sends exact duplicate of file;

z means all text from cursor position to end

&p l [parameters] &e - list formatting parameters (left margin, printed line length, top margin, and printed page length); enter space to accept current setting; to change, enter new value followed by &e
&p o [y, n] - reject ornamentation characters (limit repetitive punctuation to 2 occurrences, no effect on receiving numbers and letters)

&p dots 2 4 6 [y, n] escape sequences recognized

&z - abort a transmission

&p a [y, n] - append linefeed in transmit mode

& dots 3 4 5 for &e - switch speech box mode on and off; speech box means all serial input is spoken and not retained; pressing any key shuts up the voice (as does a control-x from the computer)

Clock/Calendar

&o t - speak time

&o s t - set time

&o s a - set time mode (American 12-hour with AM and PM)

&o s e - set time mode (European 24-hour)

&o d - speak current date

&o s d - set date (month, day, and year)

&o s w - set day of the week

Calculator

&o c - enter calculator

&p - set precision (up to 12 digits)

&e - execute calculation or speak answer again

&c - clears result register and calculator accumulator

functions: + (plus) - (minus) dots 16 (times) dots 34 (divided by)
dots 146 (percent)

& dots 3 4 5 square root

&s a-f - store current result in memory a-f

a-f recall memory - can be used in a calculation

&z - exit calculator

Stopwatch

&o w - enter stopwatch

dot 6 - start/stop timer

dot 3 reset timer

space bar - read timer

c - speak last reading

(dots 3-4-5-6) set countdown timer

&z - exit stopwatch

Disk Drive Functions

&s - (storage) activates disk drive

l - load file from disk drive

s - save file to disk drive

t - print file to disk drive

r - resume reading a file

k - kill file on disk drive

f - format disk in disk drive

d - directory of disk drive

m - make a subdirectory.

x - delete a subdirectory

Miscellaneous Commands

hold down space bar (as power is turned on) - silent start

&for &for - warm reset (resets all parameters to default without losing data files)

&for (as power is turned on) - warm reset as above

hold down &i (as power is turned on) - hard reset (**all files are destroyed!**)

&p r - speak firmware revision number

&in &e - altogether (allows entry of extended ASCII characters, like ALT).

Default Values

These parameters are set every time you do a warm or hard reset. This list is arranged in the same order as the status menu within the machine.

baud rate: 9600
parity: none
duplex: half
data length: 8
stop bits: 1
handshake: software
append linefeed when transmitting: off
braille translator: off
cursor tracking: on
recognize escape sequences: off
speak windows instead of lines: off
reject ornamentation characters: off
skip blank lines: on
include case during find: off
beep at column: 0
line length: 0
left margin: 0
page length: 0
top margin: 0
Window length: 80
serial port active: off
interactive timeout: 0
interactive mode: off
speech parameters: some punctuation

